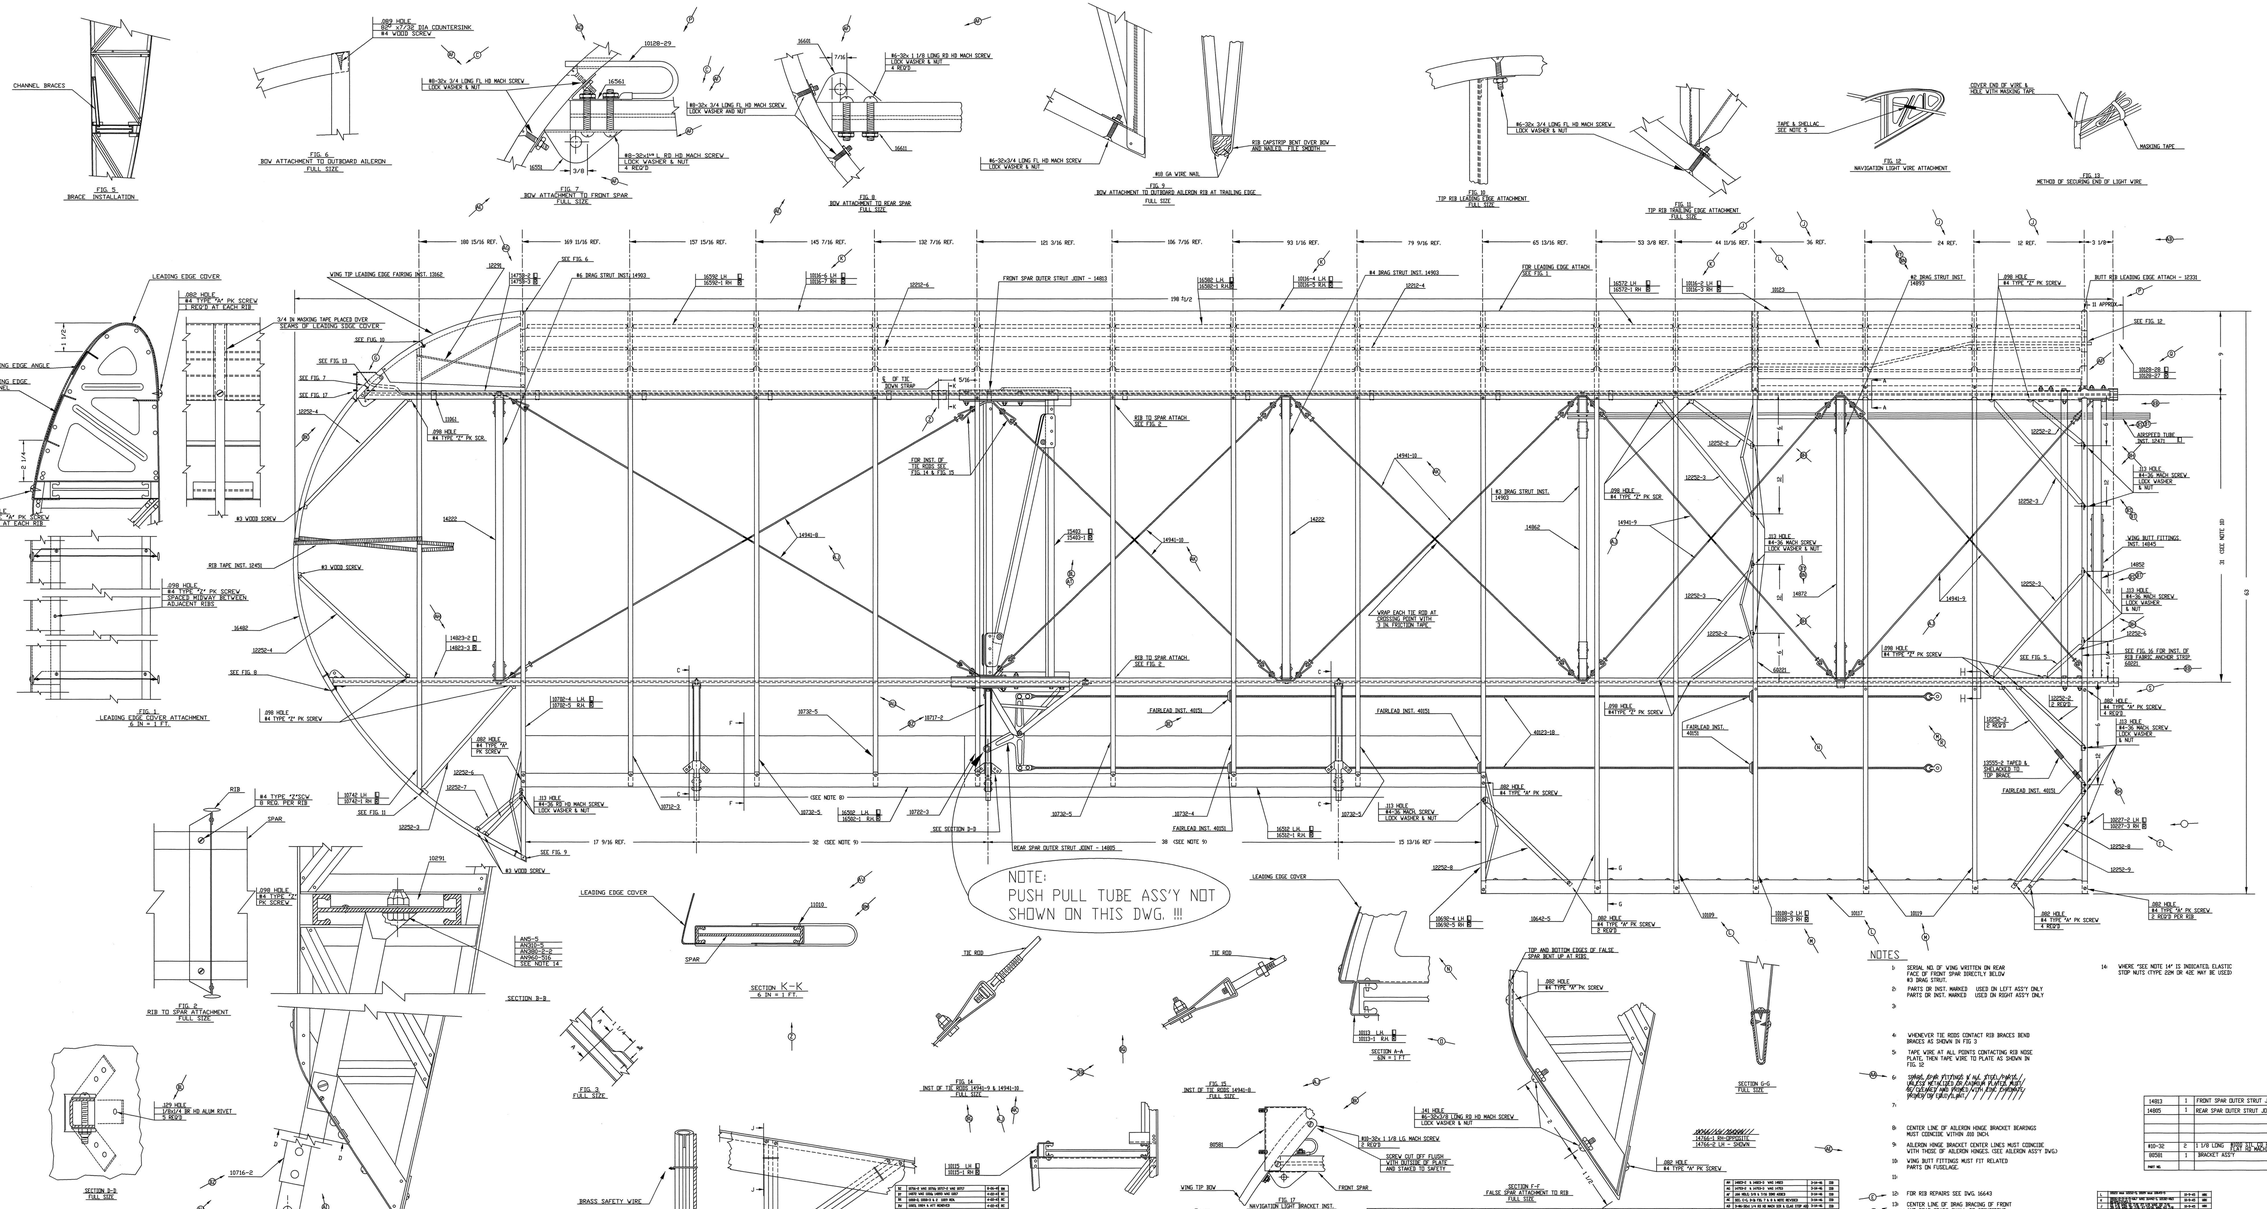
CHANNEL BRACES
BRACE INSTALLATION
.092 HOLE FOR #7/32" DIA COUNTERSINK #4 WOOD SCREW
#6-32x 3/4 LONG FL HD MACH SCREW LOCK WASHER & NUT
#8-32x3/4 LONG FL HD MACH SCREW LOCK WASHER AND NUT
#8-32x11/8 L RD HD MACH SCREW LOCK WASHER & NUT 4 REQ'D
#6-32x 1 1/8 LONG RD HD MACH SCREW LOCK WASHER & NUT 4 REQ'D
#6-32x3/4 LONG FL HD MACH SCREW LOCK WASHER & NUT
#68 GA WIRE NAIL
RIB CAPSTRIP BENT OVER BOV AND TACK'D - FLY SCREEN
#6-32x 3/4 LONG FL HD MACH SCREW LOCK WASHER & NUT
TIP RIB LEADING EDGE ATTACHMENT FULL SIZE
TIP RIB TRAILING EDGE ATTACHMENT FULL SIZE
TAPE & SHELLAC SEE NOTE 5
NAVIGATION LIGHT WIRE ATTACHMENT
COVER END OF WIRE & HOLE WITH MASKING TAPE
MASKING TAPE
METHOD OF SECURING END OF LIGHT WIRE
FIG. 6 BOV ATTACHMENT TO OUTBOARD AILERON FULL SIZE
FIG. 7 BOV ATTACHMENT TO FRONT SPAR FULL SIZE
FIG. 8 BOV ATTACHMENT TO REAR SPAR FULL SIZE
FIG. 9 BOV ATTACHMENT TO OUTBOARD AILERON RIB AT TRAILING EDGE FULL SIZE
FIG. 10
FIG. 11
FIG. 12
FIG. 13
LEADING EDGE COVER
LEADING EDGE ANGLE
LEADING EDGE CHANNEL
.092 HOLE #4 TYPE "A" PK SCREW 1 REQ'D AT EACH RIB
.098 HOLE #4 TYPE "A" PK SCREW SPACED EVENLY BETWEEN ADJACENT RIBS
#3 WOOD SCREW
RIB TAPE INST. 12451
FIG. 1 LEADING EDGE COVER ATTACHMENT 6 IN = 1 FT.
WING TIP LEADING EDGE FAIRING INST. 12662
3/4 IN MASKING TAPE PLACED OVER SEAMS OF LEADING EDGE COVER
SEE FIG. 10
SEE FIG. 13
SEE FIG. 7
SEE FIG. 17
SEE FIG. 6
SEE FIG. 8
SEE FIG. 9
SEE FIG. 11
SEE FIG. 12
SEE FIG. 5
SEE FIG. 36 FOR INST. OF RIB FABRIC ANCHOR STRIP, 68021
SEE SECTION B-B
SEE NOTE 9
SEE NOTE 8
SEE NOTE 10
SEE NOTE 14
SEE NOTE 15
SEE NOTE 16
SEE NOTE 17
SEE NOTE 18
SEE NOTE 19
SEE NOTE 20
SEE NOTE 21
SEE NOTE 22
SEE NOTE 23
SEE NOTE 24
SEE NOTE 25
SEE NOTE 26
SEE NOTE